




# HAND HELD WIRELESS PAIRING

Pairing instructions for the new style ESC wireless controller. The system will need to be installed and powered up to complete pairing.

# PAIRING INSTRUCTIONS

Step 1 Turn on the Main Power.  
You have 20 seconds after turning on the power to pair a new device.

Make sure you have wireless remote selected before proceeding to the next step

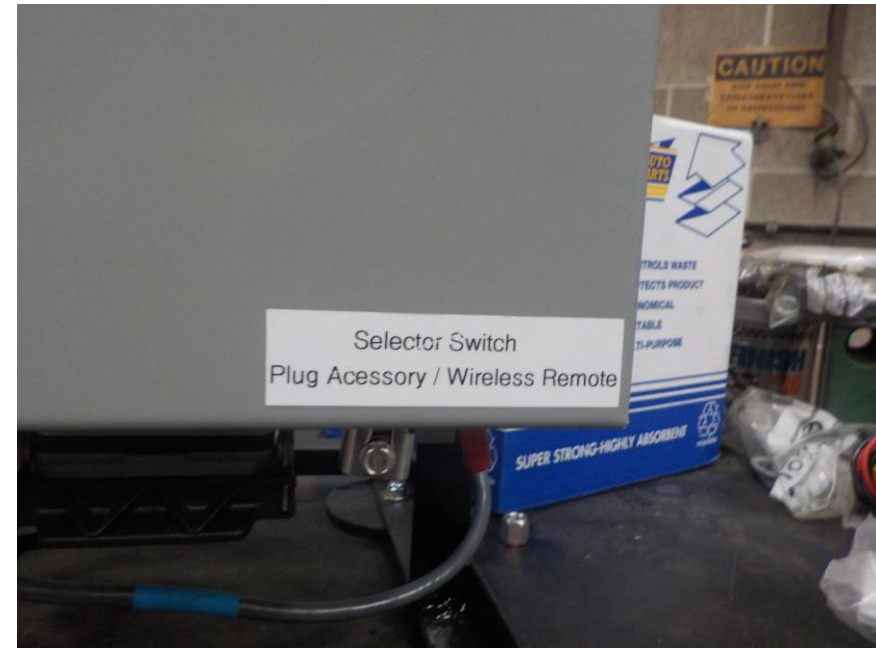

# PAIRING INSTRUCTIONS

Locate the hand held device



Hold the green button and the yellow button under the red button at the same time. This should take approximately 10 seconds





# PAIRING INSTRUCTIONS

- Once the pairing is complete push the red button to turn off the hand held.
- Push the green button to turn it back on.
- You should now be able to control the unit with the hand held controller.



# WIRELESS PARING IS COMPLETE

You are now ready to put your MKT Vibratory hammer to work . If you have any questions please click on [www.mktpileman.com](http://www.mktpileman.com) for your nearest MKT representative

